


The PD36R is a rechargeable flashlight with a powerful USB Type-C charging port. It features multiple output levels and a versatile design which includes a battery level indicator, smart output memory and two-position body clip—all which enhance daily usage in outdoor activities and tactical applications.



1600 lumens




21700/5000mAh rechargeable Li-ion battery (included)




283 meters



Dual switch operation



USB Type-C fast charging



Battery level indication



PD35 V2.0
5.43"/138 mm



PD36R
5.35"/136 mm



HIGH-CAPACITY BATTERY ENSURES LONGER RUNTIME

21700/5000mAh rechargeable Li-ion battery (included).
The capacity of the 21700 battery is twice as powerful
as the common 18650/2300mAh battery.

- Almost 6 hours at 800 lumens (high)
- Approx 8.5 hours at 350 Lumens (med)
- 26 hours at 150 lumens (low)
- 115 hours at 30 lumens (eco)



Fenix ARB-L21-5000 21700 rechargeable Li-ion battery





CHARGE FOR 10 MINUTES LIGHT FOR 5 HOURS

Standard USB Type-C fast charging port offers a faster charging experience.
10-minute charging, 5-hour usage on Low (150 lumens), always be well-prepared for your next trip.

Note: It take 4 hours to fully charge a PD36R with the standard 5V/3A charging adapter.

*Laboratory testing results from Fenix for reference only.





ACCURATE BATTERY LEVEL INDICATION

The remaining battery level can be easily and precisely obtained via the read-out indicator.

Each time the light is turned on, the battery level indicator will automatically display the battery status.

Green constant on
100% - 85%, saturated

Note: This only works with Fenix ARB-L21-5000
21700 rechargeable Li-ion battery.





TWO-WAY BODY CLIP

Easily carry the PD36R how you want
on a backpack, belt or MOLLE system



DUAL SWITCHES

SIDE SWITCH

Single click to cycle through five brightness levels
Hold to activate strobe

TACTICAL TAIL SWITCH

Slightly tap for momentary on
Fully press to turn on/off the light





SPECIFICATIONS

Size: 5.35" x 1.04" x 1.0" / 136 x 26.4 x 25.4 mm
Weight: 3.0 oz / 85 g (excluding battery)

ANSI/PLATO FL1	Turbo	High	Med	Low	Eco	Strobe
OUTPUT	1600 Lumens	800 Lumens	350 Lumens	150 Lumens	30 Lumens	1600 Lumens
RUNTIME	2 hours 50 minutes*	5 hours 49 minutes	8 hours 24 minutes	26 hours	115 hours	/
DISTANCE	283 meters	197 meters	128 meters	82 meters	35 meters	/
INTENSITY	19,977 candela	9,636 candela	4,101 candela	1,681 candela	309 candela	/
IMPACT RESISTANCE	1 meter					
WATERPROOF	IP68, 2 meters underwater					

Note: The above specifications are the test results given by Fenix through its laboratory testing using the Fenix ARB-L21-5000 21700 rechargeable Li-ion battery under the temperature of $21\pm3^{\circ}\text{C}$ and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual batteries used.

*The Turbo output is measured in total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

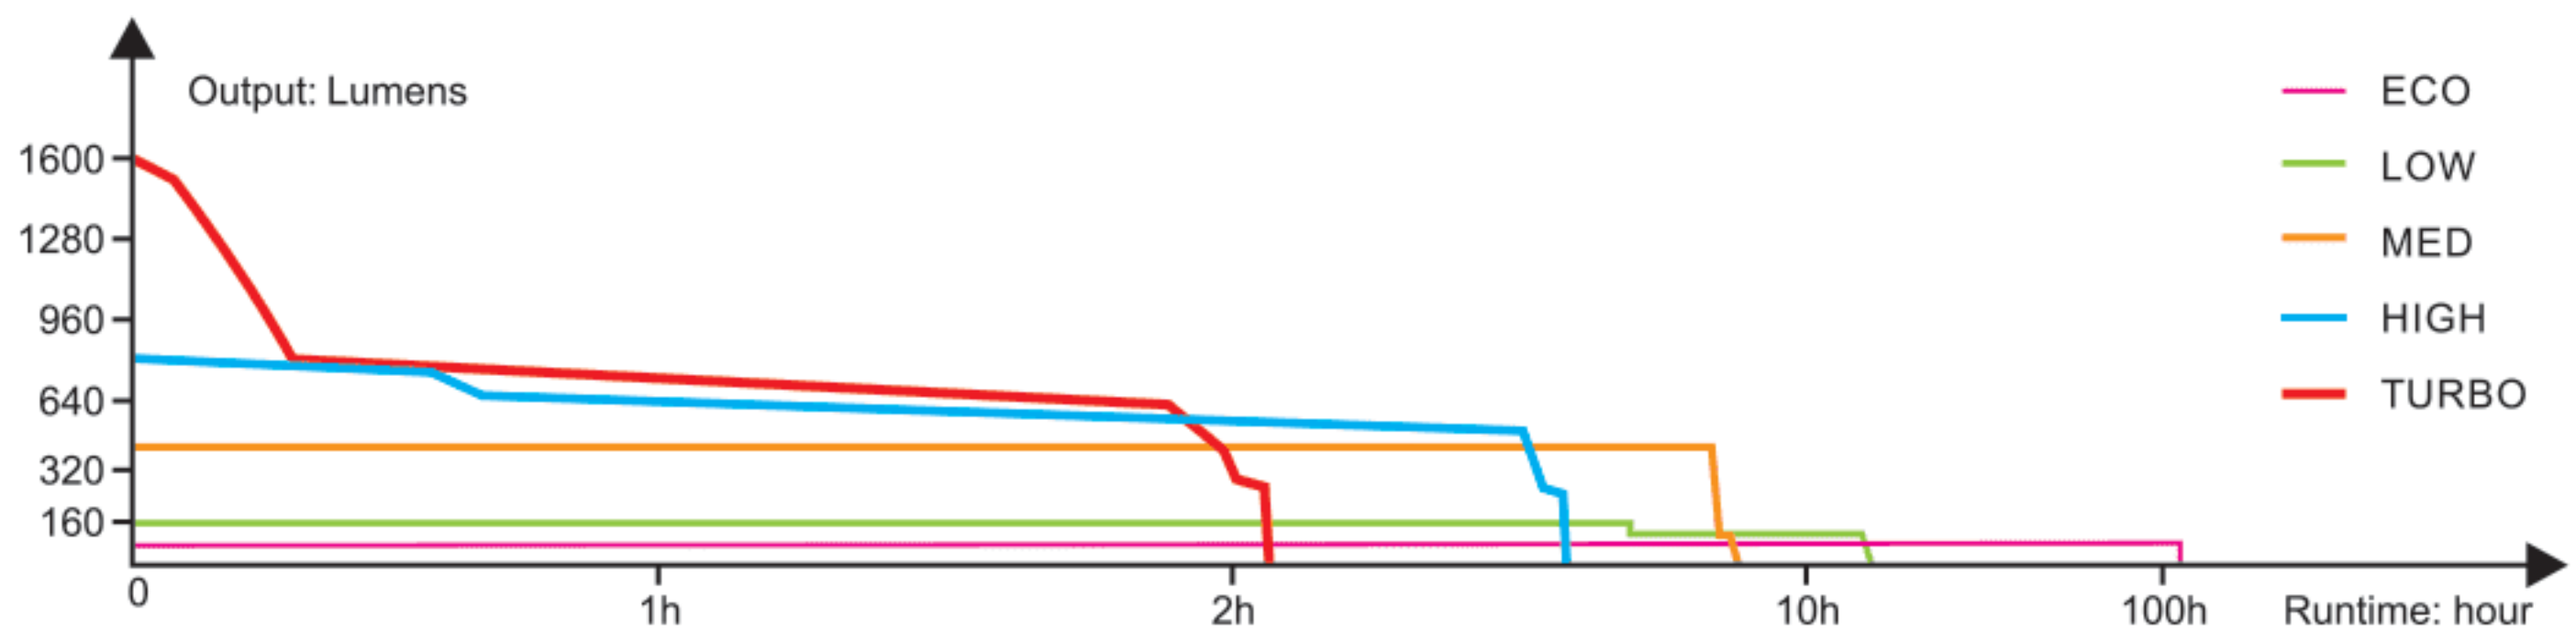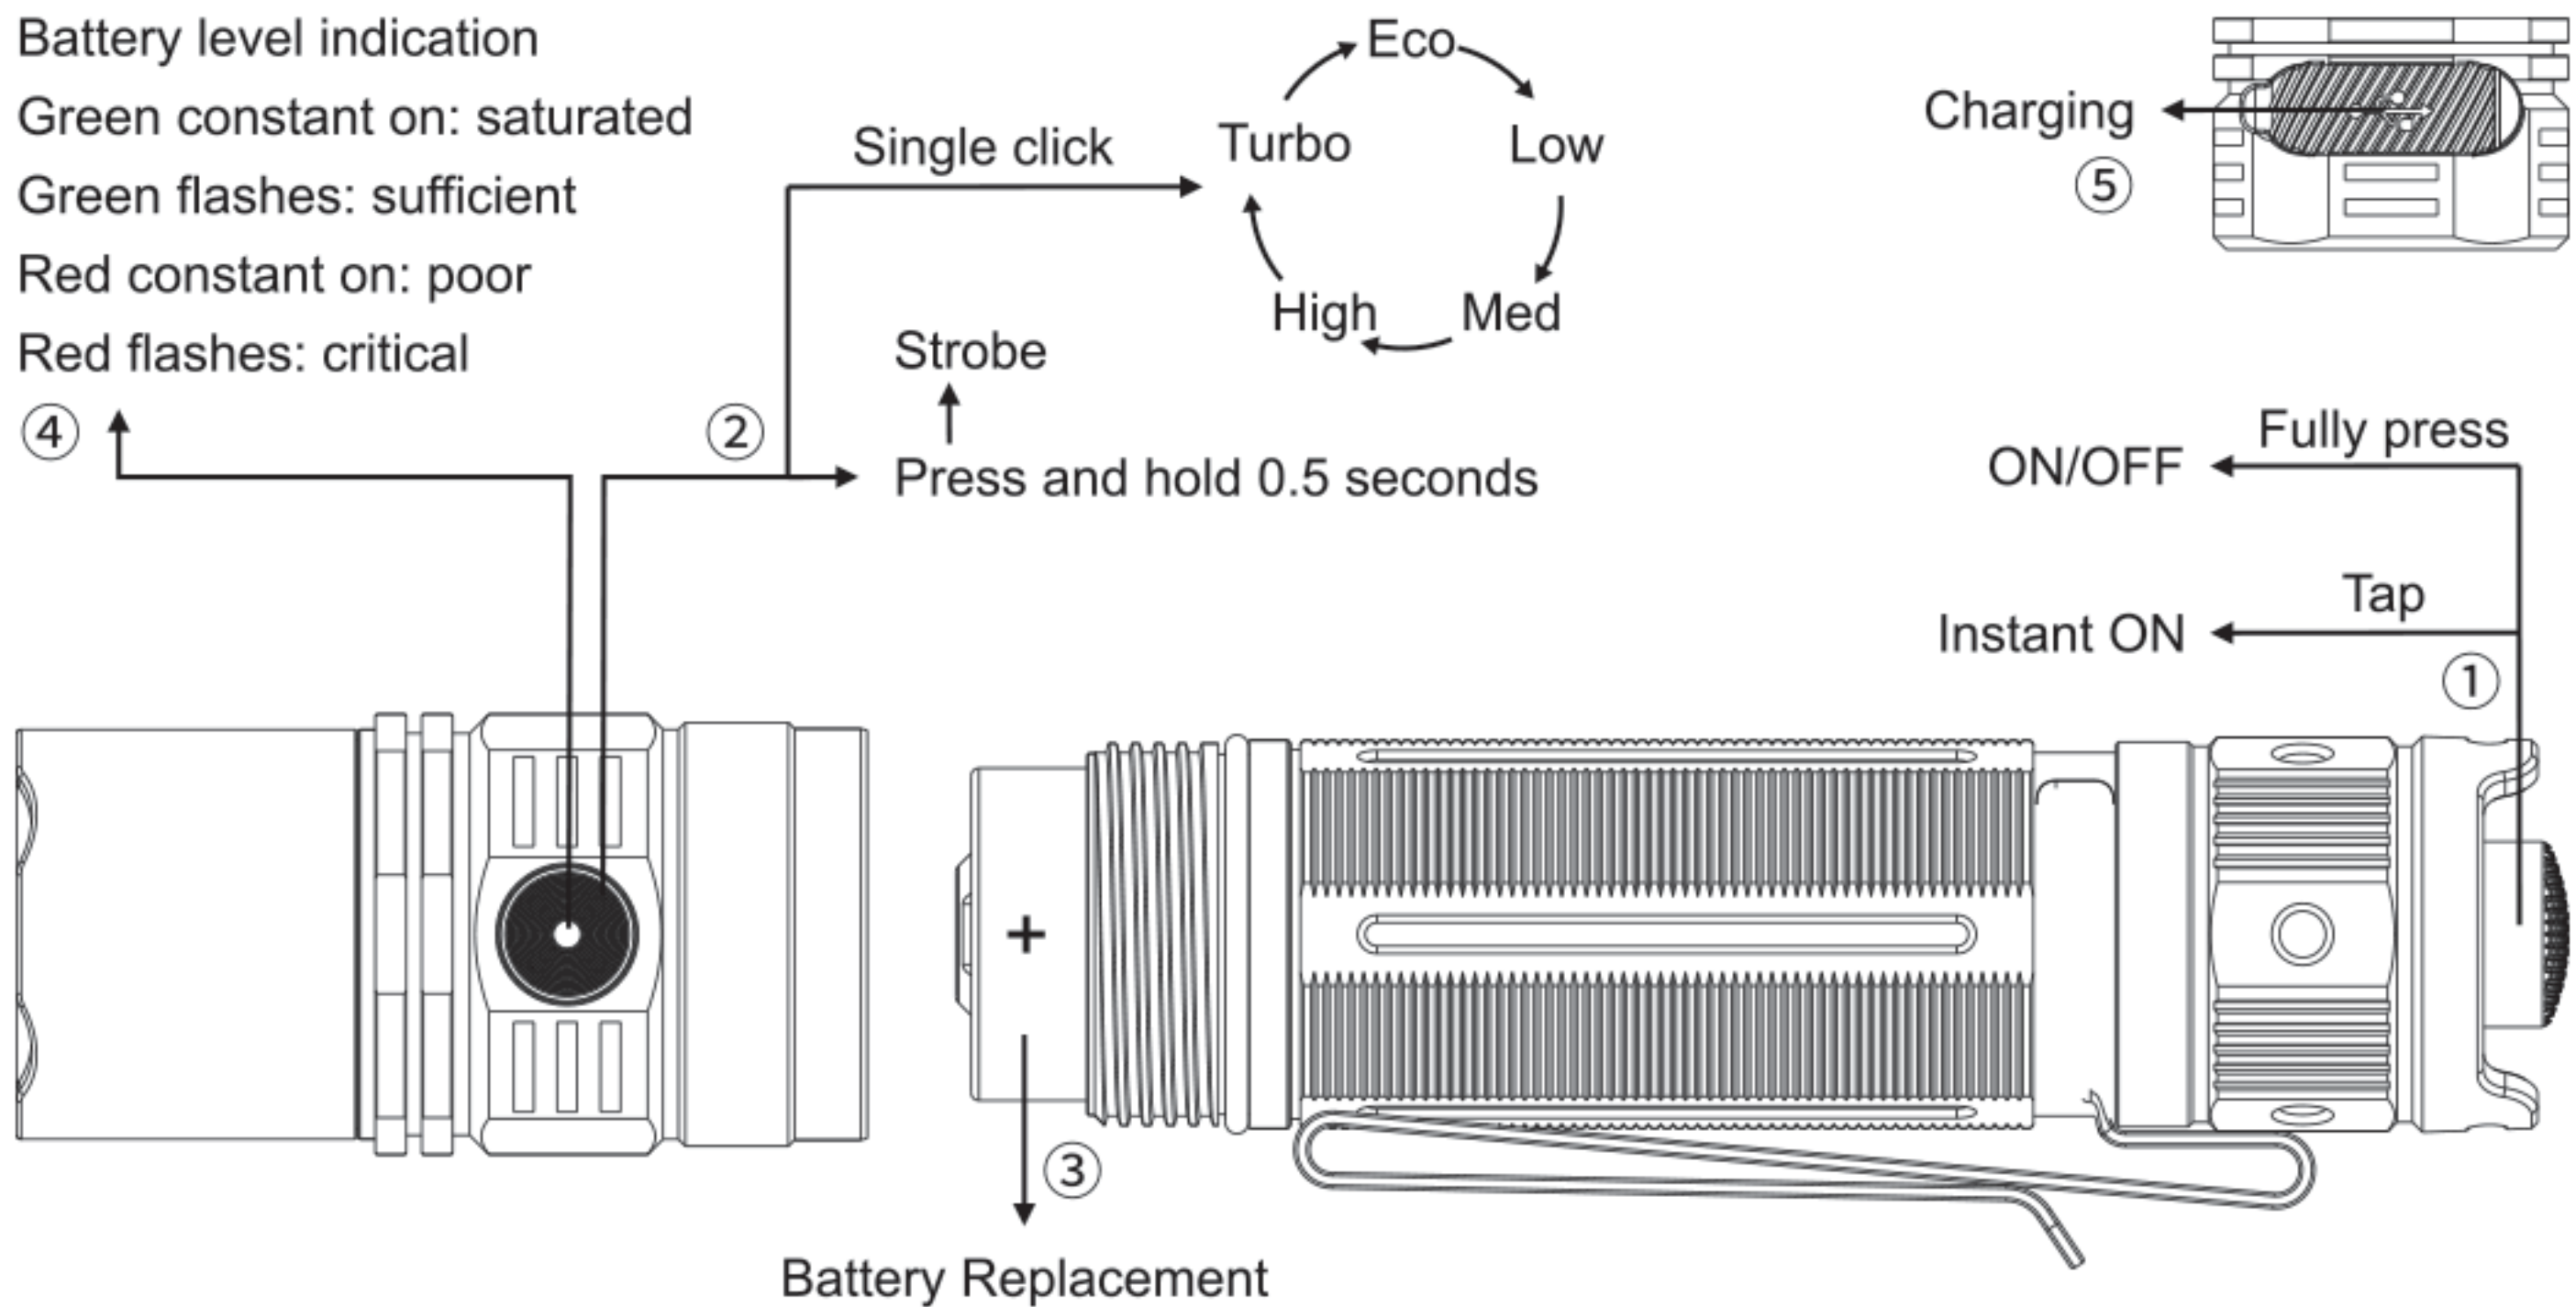




INCLUDED



PD36R flashlight



Fenix ARB-L21-5000
rechargeable Li-ion
battery



USB Type-C
charging cable



Holster



Lanyard



Spare O-ring



User manual



Warranty card

Package size: 6.3" x 3.54" x 1.38" (160 x 90 x 35 mm)